


# CURATIVE

Unit Setup & Closing Guide

For Questions & Help Contact Us 469.306.2100 www.CreationsGR.com

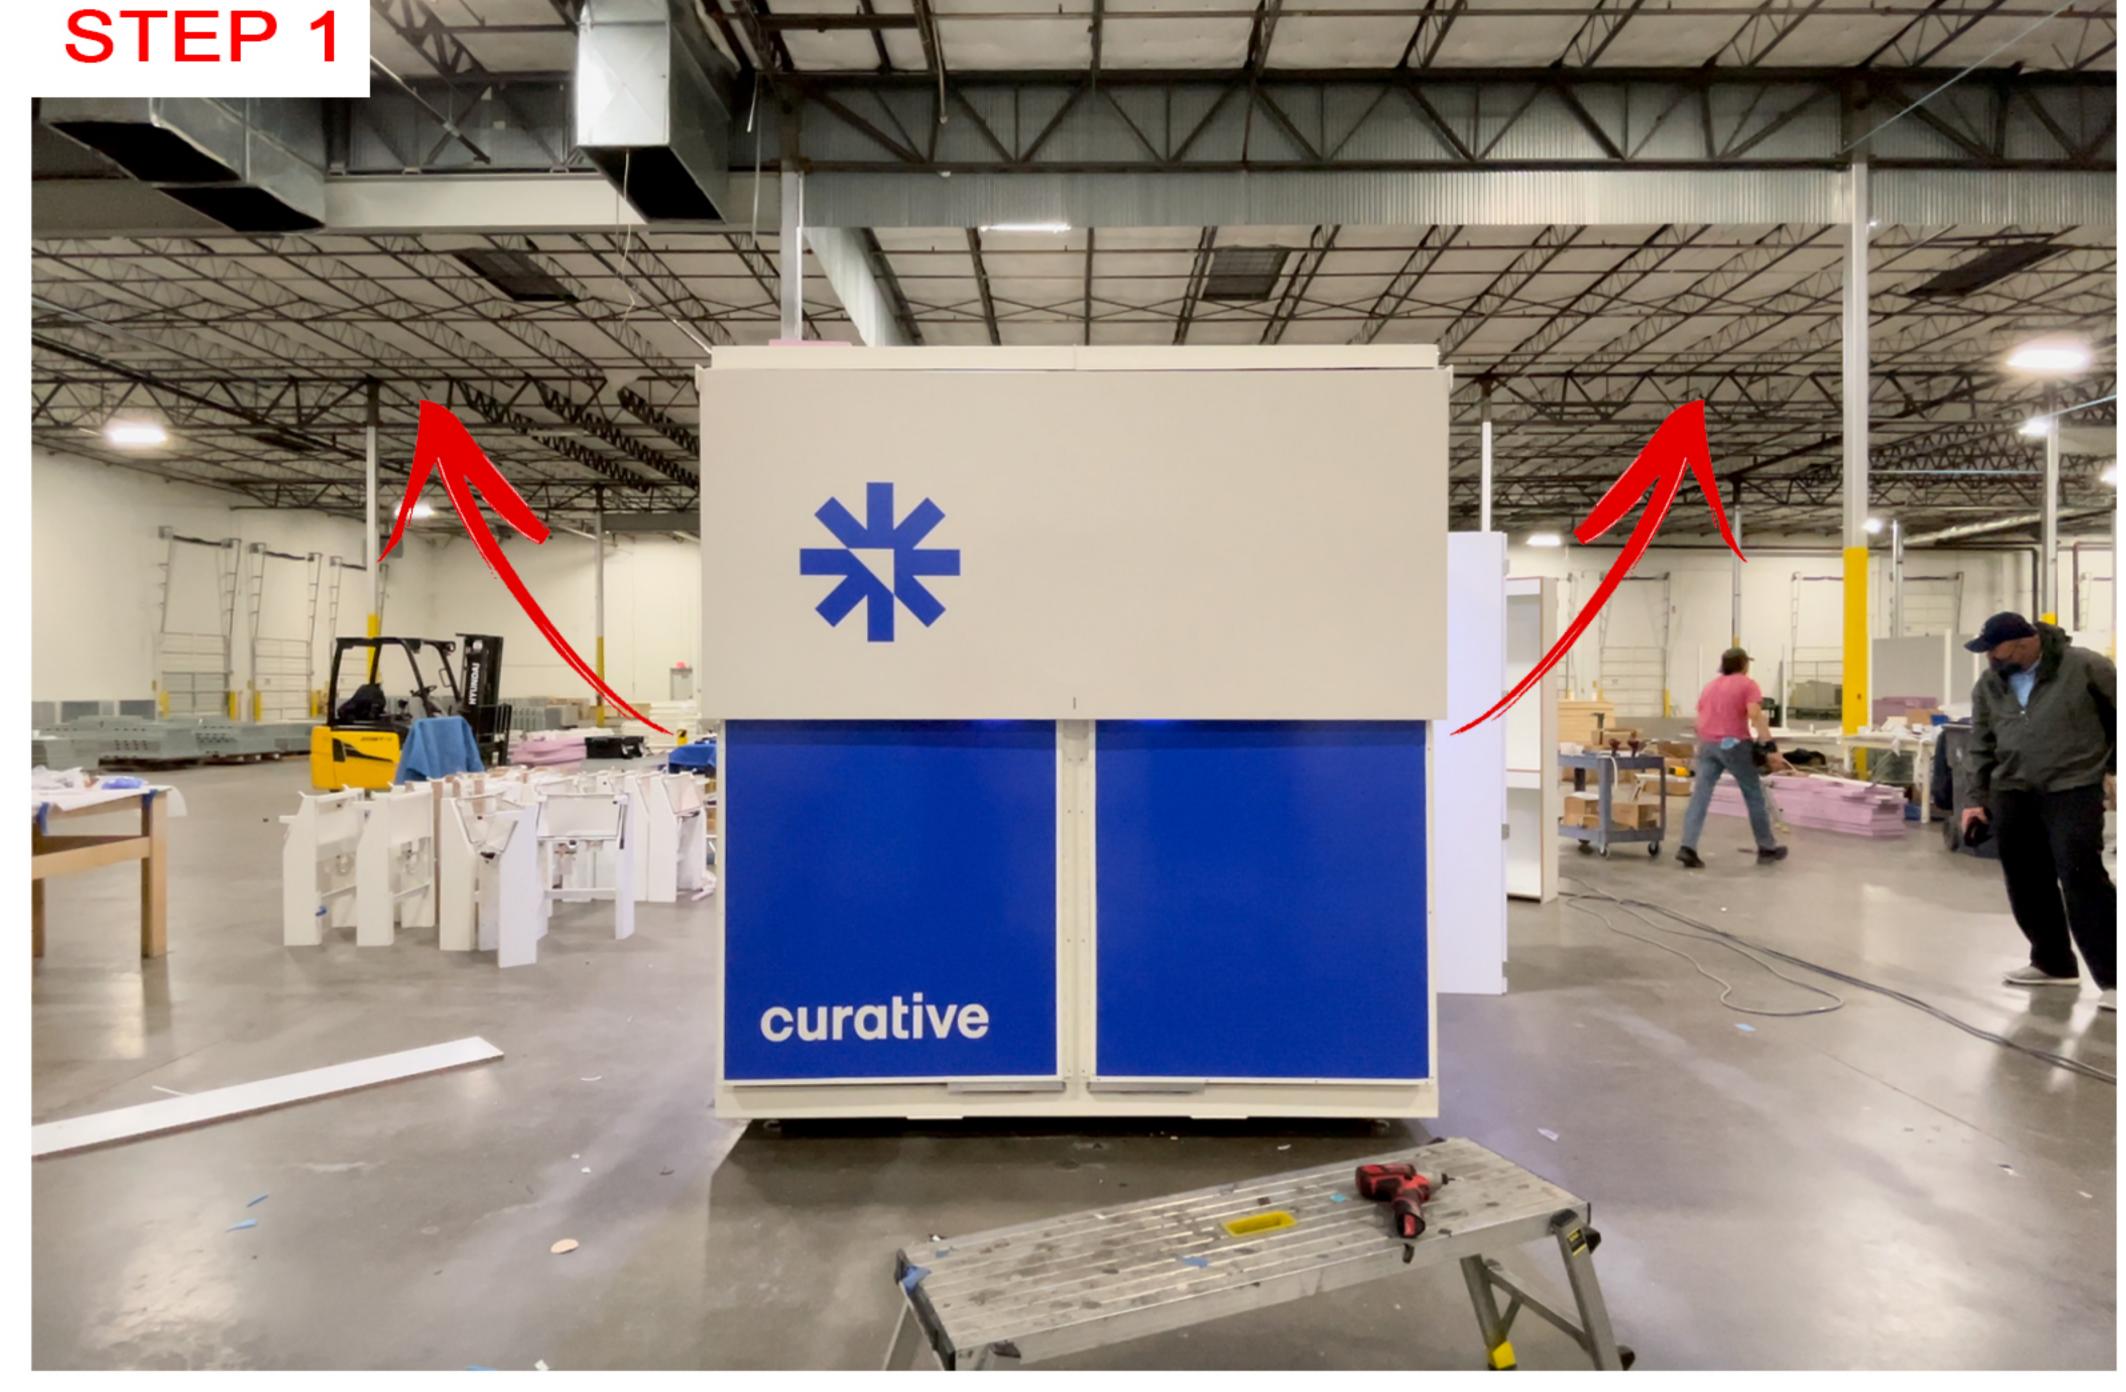













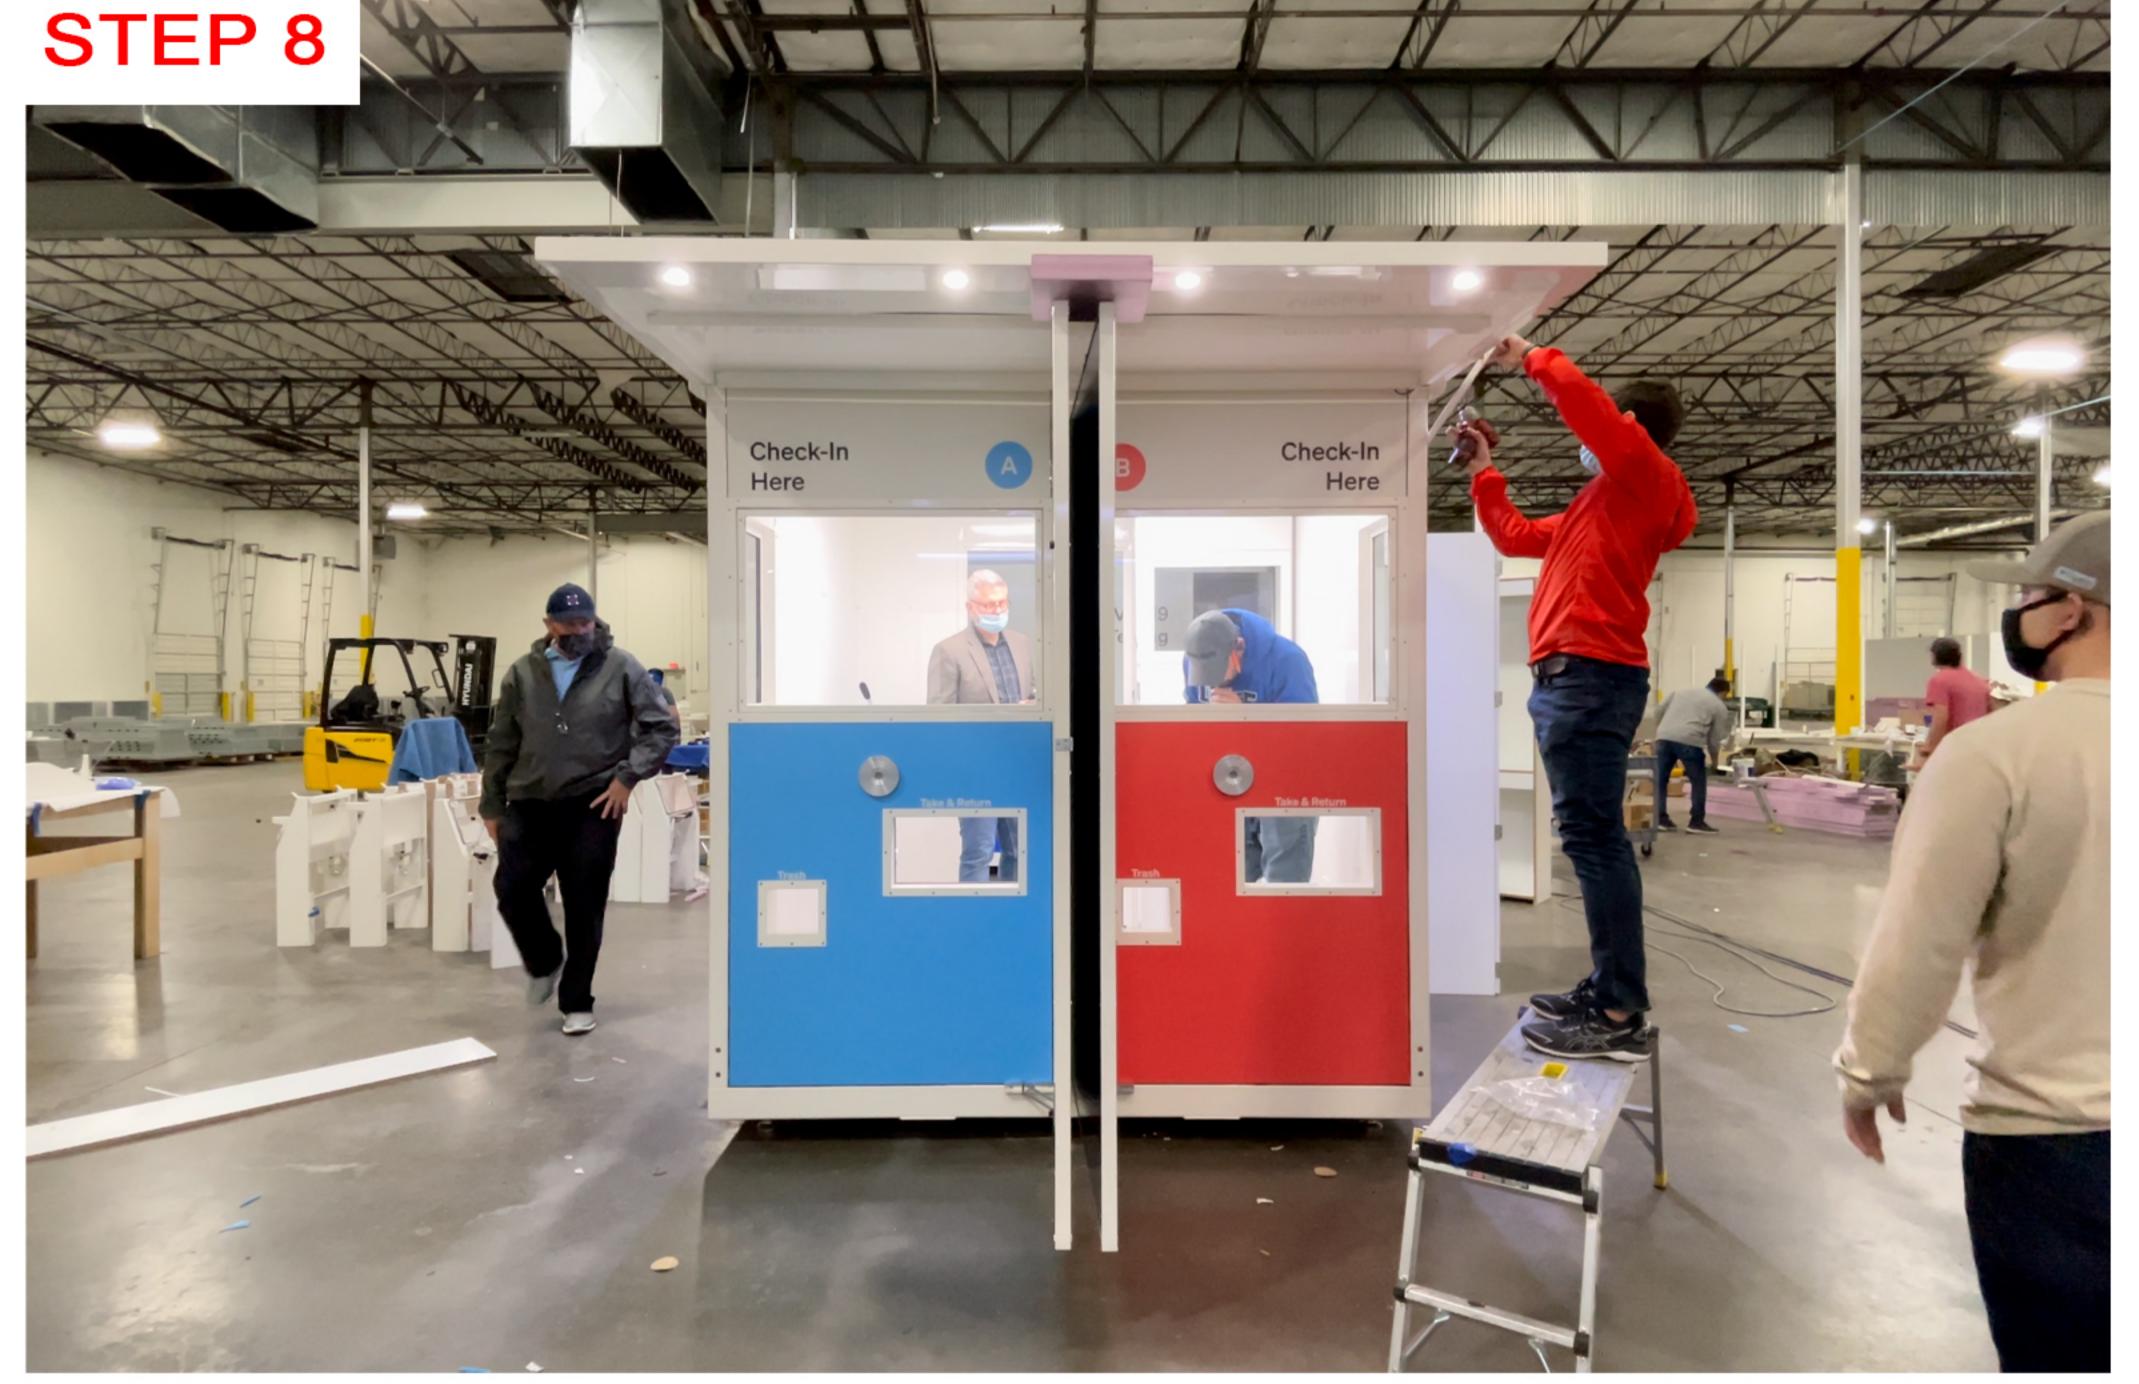





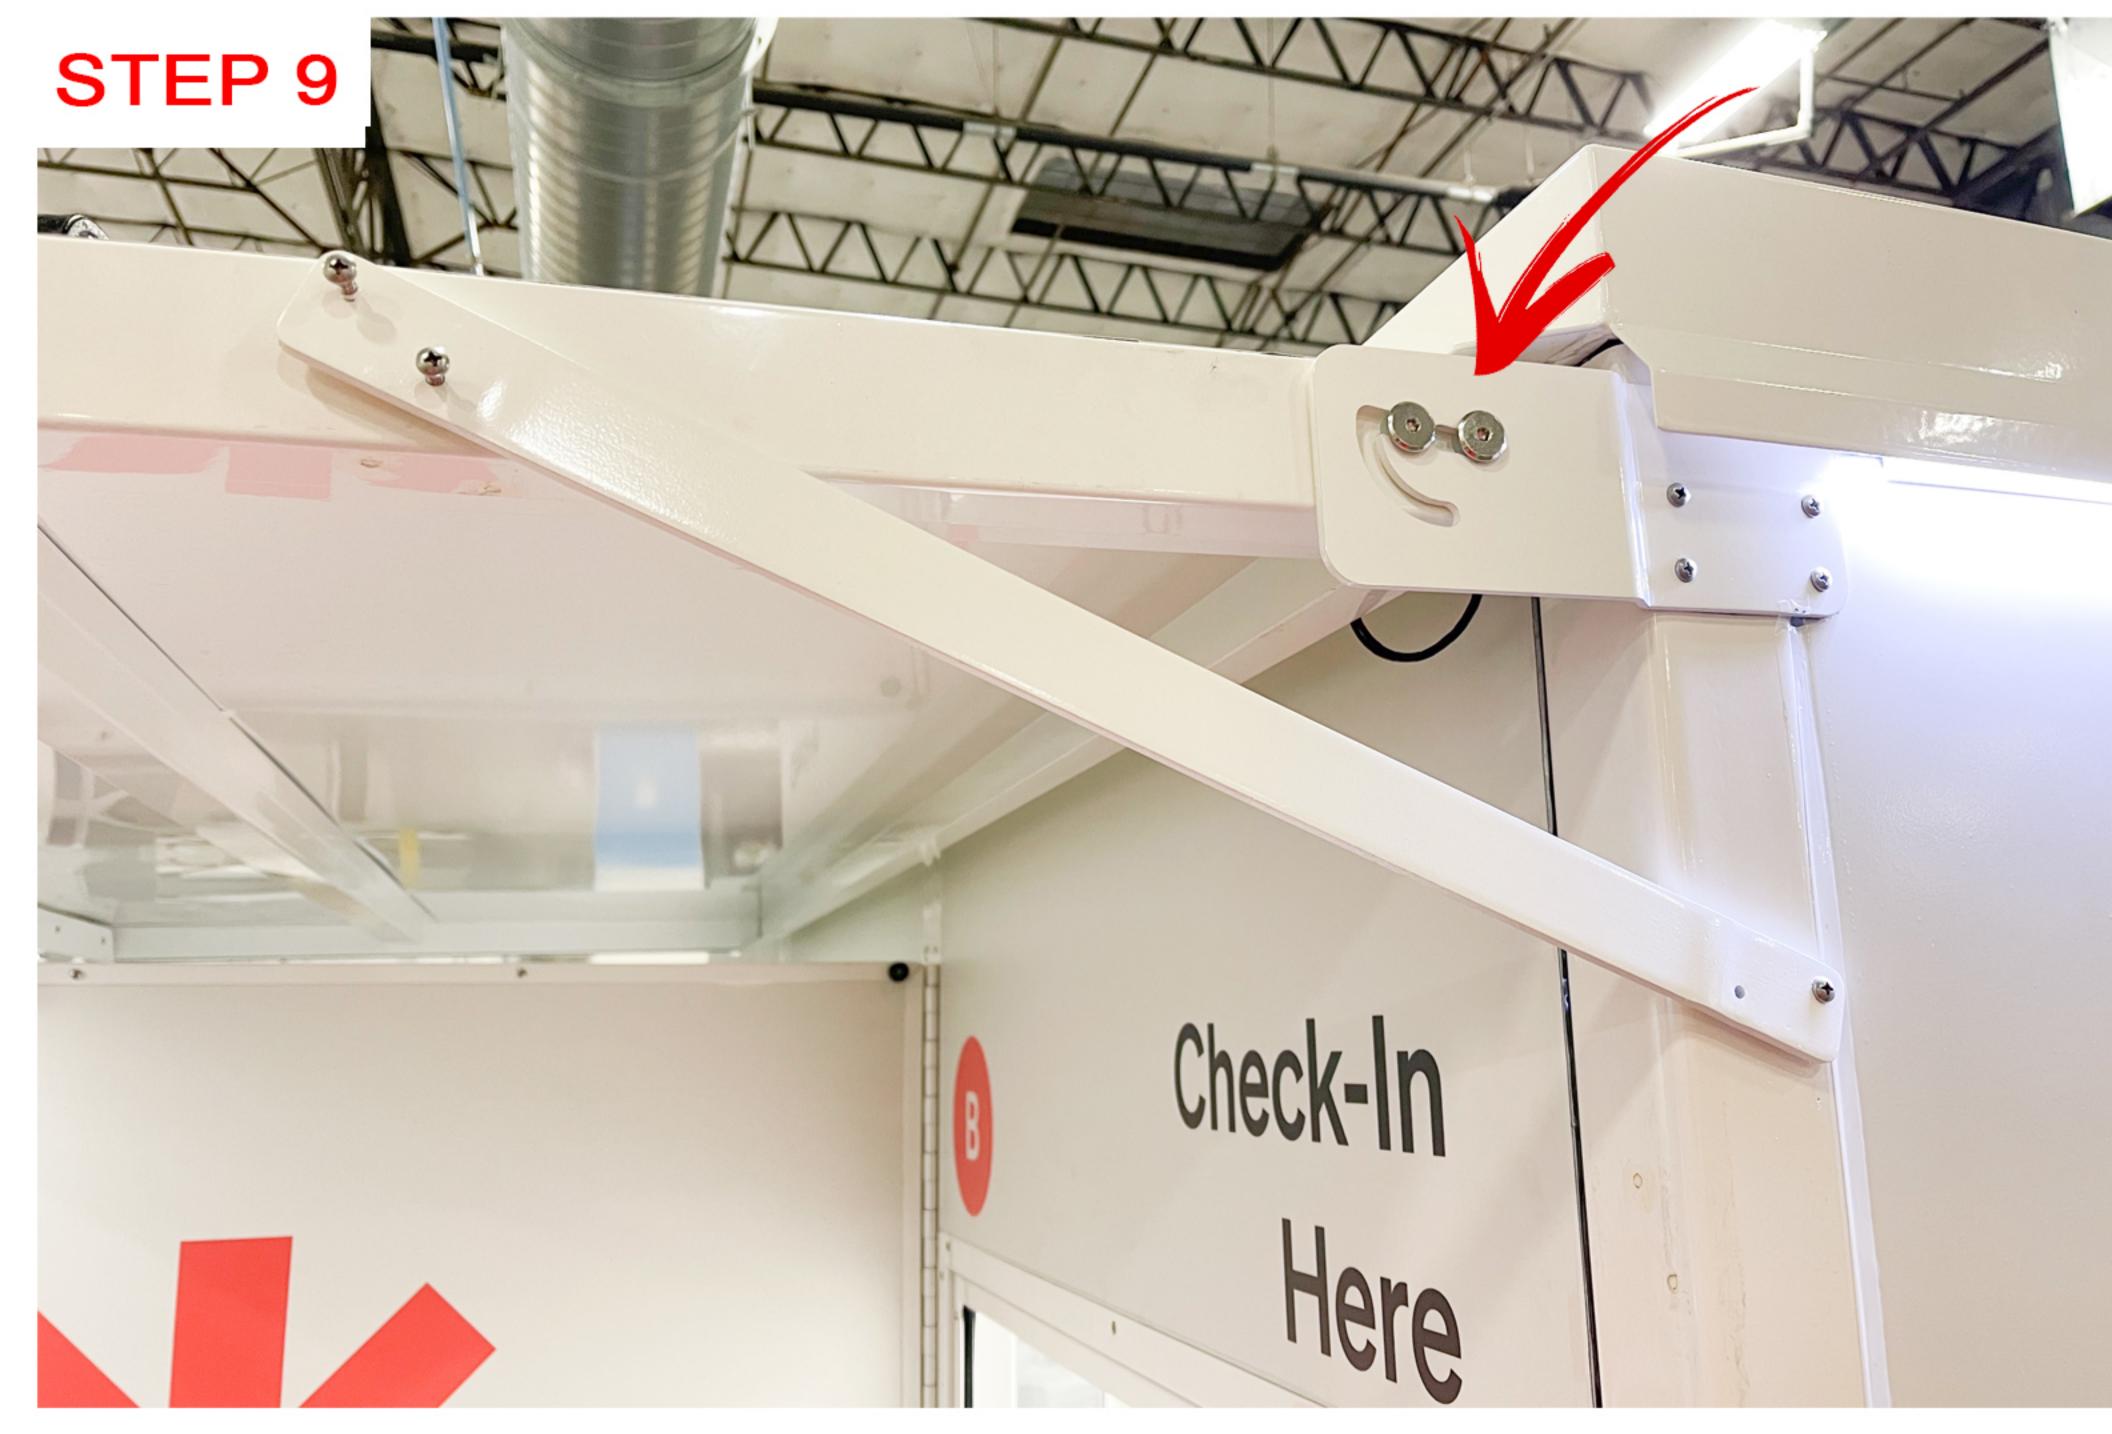

# How to Setup Your Unit

### What You Need

- (2) Individuals
- (1) Step Stool
- (1) Power Drill

### Follow these steps and reference images provided for each

### Step 1

(1) Individual with step stool lifts awning up

### Step 2 & 3

• While holding awning in up position, the 2<sup>nd</sup> individual brings wall panels outward towards the center of the unit.

### Step 4

• Once wall panels have been moved you can rest the awning on the panels

### Step 5

Locate 2" foam block provided in unit

### Step 6

• While on the step stool, raise the awning and place the 2" foam block between the wall panels and awning. The awning should now be resting on the 2" foam block. While on the step stool push the awning towards the unit, locking the fasteners in the back position (reference image in Step 9). Make sure both sides of the awning are in the back position.

### Step 7

- Locate the awning support arm on the side of the unit.
- Locate bag with fasteners in storage cabinet.

### Step 8

Line Up awning support arm with holes and secure with fasteners. Do this on both sides of the
unit.

### Step 9


• Make sure brackets are secure and remove 2" foam block.

# Guide to Closing Unit While Leaving Awning Up







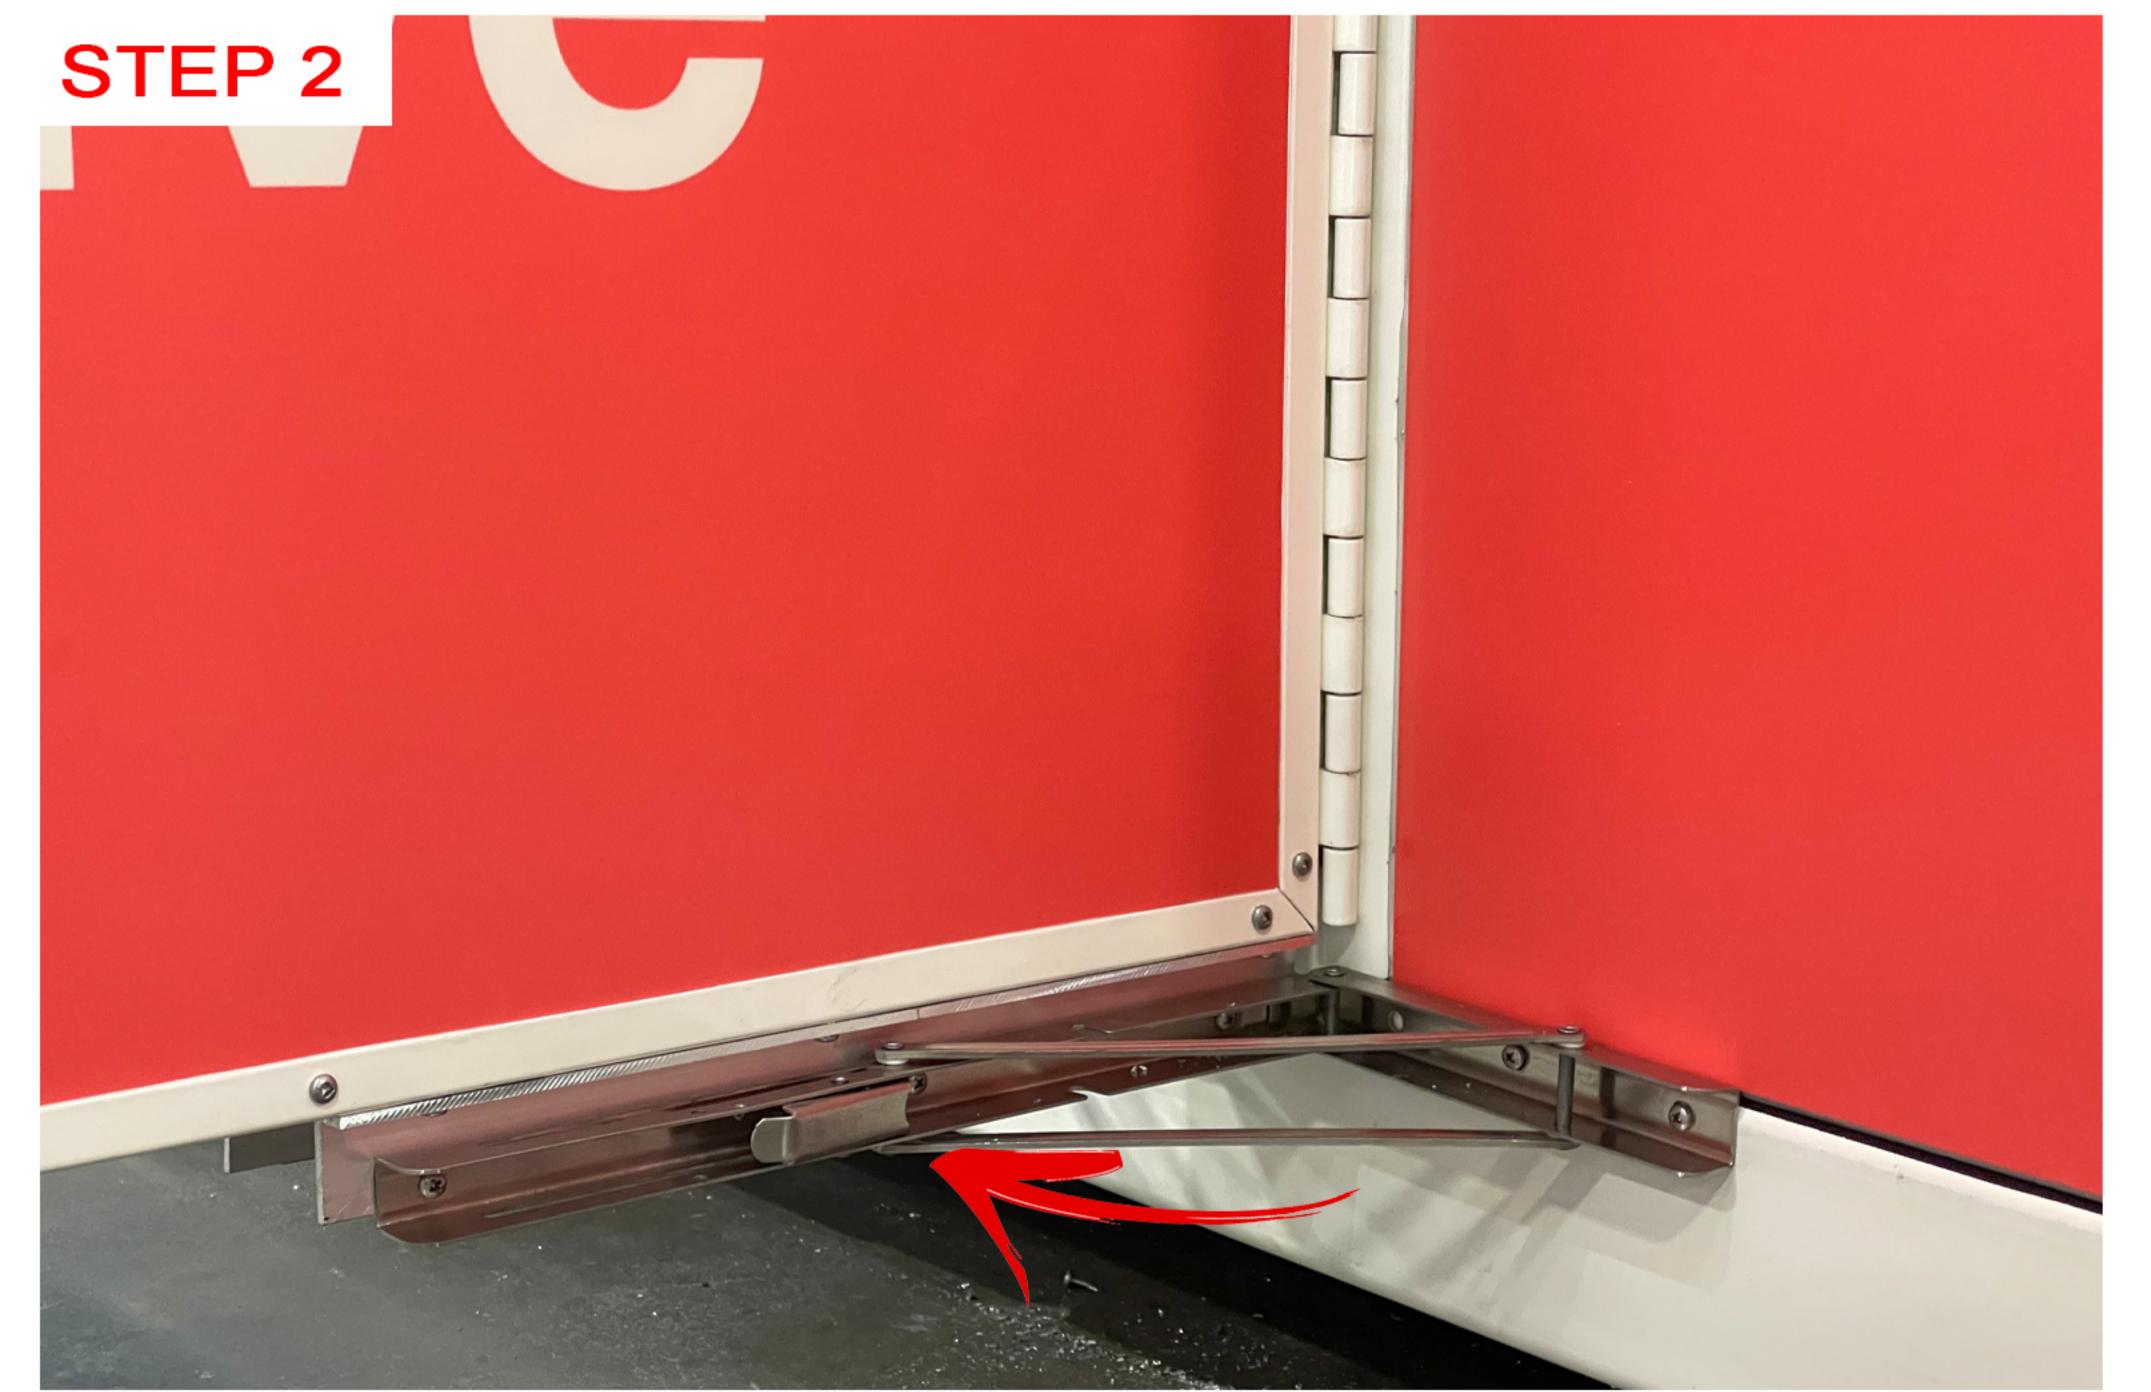





3845 Grader Street Bldg. 100 Dallas, TX 75041 469 306 2100 info@creationsgr.com www.creationsgr.com

# How to Secure Your Unit at Close

### What You Need

- (1) Individual
- (2) Locks

### Step 1

• Locate brackets at base of swinging wall panels

### Step 2

- Locate tab on bracket.
- Hold tab in and bring wall panel towards you.

### Step 3

• Bring Wall panel to closed position

### Step 4

Locate metal latch and hasp

### Step 5

• Secure latch on both wall panels and lock pad lock on hasp